

AWD Knuckle Damper Cap Installation Instructions



Purpose:

-Knuckle Damper Cap provides for better retention of damping fluid to give consistent suspension performance and minimize the need to constantly reapply damping fluid.

Installation Requirements:

-Damper cap may be used for front or rear application.

-Installation of Cap requires use of PN AWD knuckle. Part number: MA0132 to MA0138

-Stock or PN Upper Cover Plate may be used.




Remove knuckle delrin collar using pliers. Be careful not to scratch the suspension post on the knuckle. Remove only upper collar, do not remove lower collar.




Apply damping fluid to the inside of damper cap.



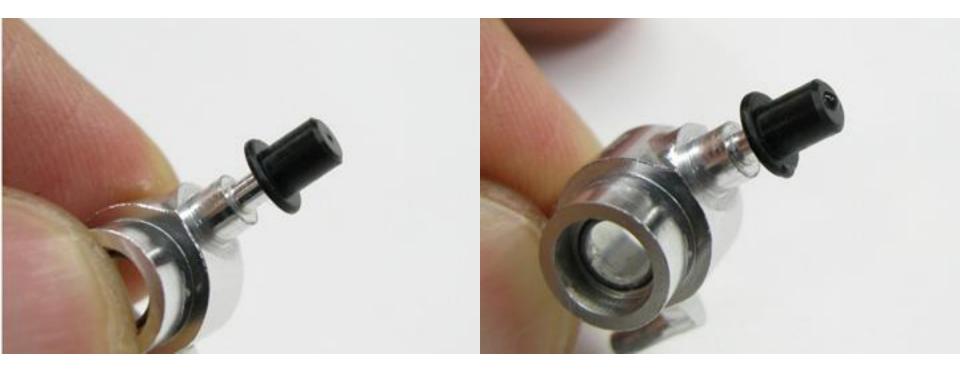

Insert damping cap onto top post of the knuckle. Cycle cap on knuckle suspension post to distribute damping fluid. Wipe off excess fluid from the vent hole.

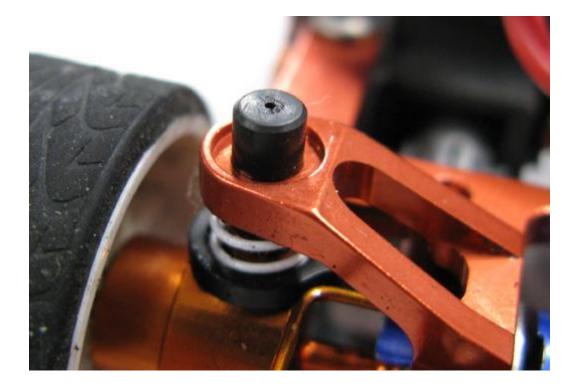

Install Damping Cap onto upper cover and install rest of suspension components.