




MA0350 Mini-Z MA030 AWD Motor Mount

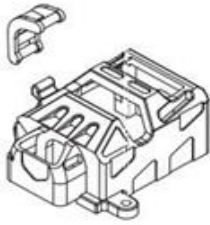



Remove the original motor cover and Top cover



Remove the servo motor cover to install the new motor mount first, when re-install servo motor cover be sure to use the included M2x4 countersunk machined screw (DO NOT use stock tapping screw)

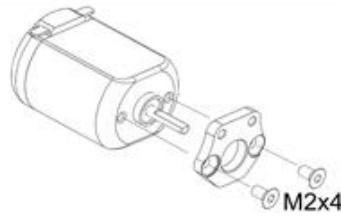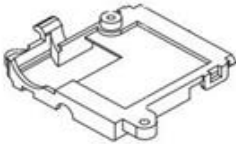

Install motor plate onto the motor first

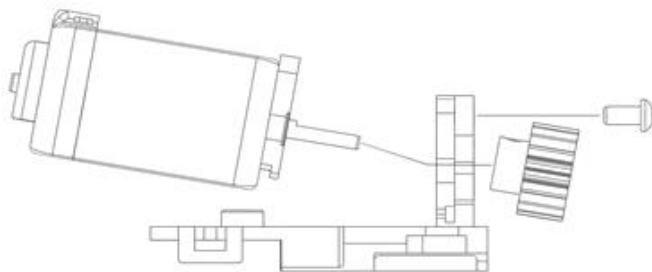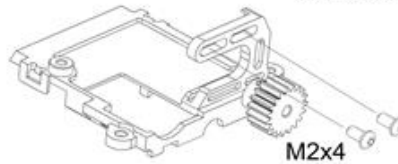

Insert narrow portion of the pinion gear through motor mount, Slightly tilt the pinion gear as pictured so you can gently slide the motor shaft into the pinion gear. Secure the set screw on pinion gear through motor mount opening on the side.

For SCREW IN MOTOR only
Fit: 15T to 21T Pinion

- Comes
- 1 x Motor Mount Base
 - 1 x Motor Plate
 - 3 x M2x4 Countersunk Screws
 - 2 x M2x4 Button Head Screws

